



目 次 TABLE OF CONTENTS

•	概要、部品、各部の名称	2
•	仕様	2
•	压着条件	2
•	適用コンタクト及び適用電線	2
•	使用上の注意事項	2
•	日常点検	2
•.	作業方法 作業手順	3
•	不良事例	3
•	Outline/Part Names	• 4
•	Basic specification.	4
•	Crimping conditions	4
•	Applicable contact and wires.	4
•	Instructions for use	4
•	Routine check	·· 4
•.	Operating procedure	5
•	Example of Failure cases	5

1001 SERIES	INSTRUCTION MANUAL	No. 205-03-330
106-03-004	© 2019 KYOCERA Corporation	PAGE 1/5

取扱説明書 手動圧着工具



106-03-004

適正な圧着状態であることを確認後、ご使用ください。

作業方法 1

クリンパーの選定

- 1.クリンパーには、適用電線サイズが刻印されています。
- 2.使用する電線サイズと刻印が一致しているか確認してください。
- 3.クリンパー固定ネジを緩め、クリンパーの刻印と電線サイズをを合わせてください。
- 4.クリンパーをセットする。(写真1)
- AWG22サイズの時→ワイヤークリンパーAを下に合わせる。 AWG24-26サイズの時→ワイヤークリンパーBを下に合わせる。
- 5.スペーサをセットする。(写真2)
- 6.AWG22サイズの時→ワイヤークリンパーAとインスクリンパー22の刻印を合わせる。(写真3)
- 7.クリンパーを上方に押し付けながら固定ネジを締め付けてください。(写真4)



作業方法 2



写真2 スペーサーのセット



不良事例





写真4 固定ネジの締め付け



作業手順

1.適当(20センチ程度)な長さのターミナルをガイドに挿入し、 圧着する端子を圧着位置中央に正しくセットします。

2.正規の長さにストリップした電線を可動カッターに軽く突き当て 位置合わせします。

3.ハンドルをゆっくりとラチェットの外れる位置まで閉じます。 4.ハンドルを開き圧着された電線を取り出します。 5.圧着条件表にしたがい形状を確認してください。



不良項目	事例	原因
①圧着部形状不良 (ワイヤーバレル部)	引張強度規格不良	規定外電線サイズの使 用又は工具の摩耗
 ②端子変形 ①曲 り ②ねじれ 		歯型に対し端子が中心 にセットされていない
③バレル変形	16LA TRE 0127	
③クリンプハイトの バラツキ	工具クリンプ位置が一定でない場合	ラチェットの摩耗及び 変形により、ハンドルを 完全に締付けない位置 (中間位置)、でも復帰 する状態となっている 場合に起きる

INSTRUCTION MANUAL HAND CRIMPING TOOL



Basic specification

Part No.	06 1001 103
Weight	Approx. 420g
Dimensions	220 (W) x 70 (H) x 25 (D) mm

Crimping conditions

Please make sure that the tensile strength of a contact crimped by using this tool satisfies the following value.

				0
	AWG No. of applicable wire	Crimp height for		Tensile
Position		reference (mm)		strength,
FOSILION		Core wire	Coated wire	minimum value (N)
Α	22	0.69 - 0.74	1.45 - 1.55	4.0
В	24	0.63 - 0.71	1.35 - 1.50	3.0
D	26			2.0
Strip length		3.0 – 3.8mm		

Applicable contact and wires

For special wires, please consult us separately.

Contact	Wire				
	Style No.	AWG No.	Core wire [No. of wires / dia.(mm)]	External diameter of coated wire (mm)	
60 828	33	UL1061 strand	22	7/0.25	Ø 1.26
3513	3513 XX 808		24	7/0.20	Ø 1.10
XX 80			26	7/0.16	Ø 0.98

<Instructions for use>

- When setting a contact into or removing it from the tool, do not hook the contact on the cable stopper or the anvil. Or the contact could be deformed.
- When binding wires, loosen the wires so that no stress could be applied to the contact directly. _
- Set a contact in the right orientation.
- The ratchet is equipped so that the handles would not open until proper pressure is applied.
- In order to release the ratchet as an emergency measure against erroneous crimping, move the ratchet release lever in the direction as shown in the figure below.



<Routine check>

- 1) After use, lubricate the teeth part with machine oil or etc.
- 2) Make sure that the handles open/close smoothly without any clinging or biting at the anvil or the ratchet part.
- 3) If the impressing pressure of the ratchet is decreased during a long-term usage, adjust the ratchet. The ratchet unlock position could be changed by the ratchet adjustment screw and the fixing nut loosened and turned by using a "specialized tool". After adjusted, be sure to tighten the nut. Before use it in the process, make sure that the crimping operation is performed properly in a trial.

< Operating procedure 1>

Selecting a crimper

- 1. Applicable wire sizes are indicated on a crimper.
- 2. Make sure that the indicated wire size meets the size of wire to be used actually.
- 3. Loosen the crimper fixing screw and select the applicable wire size.
- 4. Set the crimper. (Photo 1) For sizes from AWG 22: Set the wire crimper A to the lower position. For sixes from AWG 24 to 26: Set the wire crimper B to the lower position.
- 5. Set the spacer. (Photo 2)
- 6. For sizes from AWG 22, match the wire crimper A to the indication "22" of insulation crimper. (Photo 3)
- 7. Tighten the fixing screw with pushing the crimper upward. (Photo 4)



<u>Photo 1</u> Set the wire crimper. < Operating procedure 2>





Example of Failure





Photo 3 Set the insulator crimper.

Photo 4 Tighten the fixing screw.



Setting the terminal.

Procedures:

- 1. Place a certain length (20cm approx.) of the terminal on the guide, and set the part to be crimped to the center of the crimping position appropriately.
- 2. Slightly hit the wire stripped in the appropriate length against the movable cutter blade and do the positioning.
- 3. Close the handles slowly until the ratchet is released.
- 4. Open the handles and remove the crimped wire.
- 5. Make sure that the shape is right in accordance with the table of crimp conditions on the previous sheet.



Failure item	Failure item Failure description		
1) Erroneous shape of the crimped area (wire barrel)	The tensile strength is out of specification.	The wire size is out of specification, or abrasion of the tool.	
2) Deformatio n of the terminal 1. Bent 2. Twist 3. Deformat ion of the barrel	Rolling Bent up Twist Bent down Barrel crimped incompletel y	The terminal is not set in position against the crimper and anvil.	
3) Variation in crimp height	The crimping position in the tool is not fixed.	Occurs under the state in which the handles can be returned even if they are closed incompletely due to abrasion or deformation of the ratchet.	

No. 205-03-330 PAGE 5/5